

尺寸：210\*143mm

材质：55g书纸 黑白印刷



**10.1" DVD PLAYER WITH  
BUILT-IN SPEAKER**

**EPD-1001A**



## **User Manual**

 
**Please read carefully before use and keep for future reference.**




# Contents


Important Safety Instructions.....	2-3
Location of Controls.....	4-5
Remote Controller Button Introduction.....	5
Remote Battery Information.....	6
Handling Discs.....	6
Basic Connection.....	7
Basic Operation.....	8
DVD Programming.....	9
About Discs.....	9
Settings Menu.....	10-12
Troubleshooting .....	13
Specifications .....	14
Support .....	15


# Important Safety Instructions

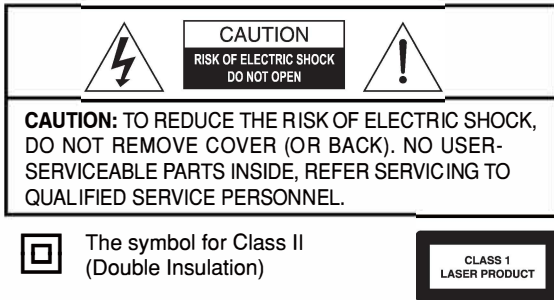


**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

  The symbol for Class II (Double Insulation)

 CLASS 1 LASER PRODUCT

 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## CAUTION

This digital video disc player employs a laser system. To ensure proper use of the product, please read this user manual carefully and retain for future reference. Should the unit require maintenance, contact customer service (details on the last page of this manual). If you are giving this product to someone else, please provide this instruction manual.

Using this product in ways other than those specified in this manual may result in hazardous radiation exposure.

To prevent direct exposure to laser beams do not open the enclosure. Visible laser radiation may be present when the enclosure is opened. Do not look into the beam.

## Warning:

To reduce the risk of fire or electric shock and other interferences, use manufacturer recommended accessories only.

## DANGER



INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM.

## LASER SAFETY

This unit employs an optical laser beam system in the DVD mechanism, designed with built-in safeguards. Do not attempt to disassemble, refer to qualified service personnel. Exposure to this invisible laser light beam may be harmful to the human eye.

THIS IS A CLASS-1 LASER PRODUCT. USE OF CONTROLS, OR ADJUSTMENTS OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, MAY RESULT IN HAZARDOUS LASER LIGHT BEAM EXPOSURE

## WARNING:

To prevent fire or shock hazards, do not expose this item to any liquid, water, rain or moisture, dripping or splashing of any kind. To avoid accidental hazards, keep away from objects filled with liquids such as vases, sinks or baths.

Do not block any air inlets or ventilation openings. Do not impede ventilation openings with newspaper, tablecloths, curtains or other like material.

Keep away from sources of direct heat such as direct sunlight, radiators, ovens or other apparatus (including amplifiers) that produce heat. Do not place on hot surfaces.

Keep away from high levels of humidity.  
Keep away from sharp objects.

Read all instructions before use and save these instructions in a safe place. If passing on this appliance to someone else, please pass on these instructions with it. Remove the disc before moving the unit. If the player is moved with the disc loaded, the disc may be damaged.

For your own safety, read the following instructions carefully before attempting to connect this DVD Player to the mains.

This unit is designed to operate on:

- 120V~ 60Hz AC/DC Adaptor (included) – (DC Input 12V)
- Re-chargeable lithium-ion battery (battery included). This battery is non-replaceable.
- Car Adaptor (included) – plugs into the cigarette lighter of your car

# Important Safety Instructions

## NOTES ON HANDLING

- When shipping this DVD player, always use the original shipping carton and packing materials. For maximum protection, re-pack the unit as it was originally packed at the factory.
- Do not use volatile liquids such as insect sprays near this item. Do not let rubber or plastic products come into contact with this item for long periods of time as they will leave marks on the item.
- The DVD player may become warm after extended periods of use; this is normal and not a malfunction.
- When the DVD player is not in use, remove the disc and turn off the power.
- To ensure your DVD player is in good working order, it's advisable to use it from time to time rather than leaving it unused for long periods of time.

## CLEANING AND CARE:

- Use a soft, dry cloth for cleaning.
- Do not use any liquids or solvents to clean, this may damage the unit.
- Wipe any moisture off with a soft, dry cloth, and be sure discs are fully dry before using.
- Do not store discs in high temperature or high-humidity locations. The discs may become warped and get corrupt.
- Wipe any moisture off with a soft, dry cloth, and be sure discs are fully dry before using.
- Handle discs carefully so that fingerprints and dust do not get onto the surface of the disc. To clean off, use a soft cloth. Do not use a hard cloth since these will mark the disc.

## TO OBTAIN A CLEAR PICTURE:

The DVD player is a high technology, precision driven device. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality becomes poor. To obtain a clear picture, we recommend regular inspection and maintenance.

## NOTES ON MOISTURE CONDENSATION:

Moisture condensation could damage your DVD player. Moisture condensation occurs for example when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on

the optical pick-up lens inside the unit, one of the most crucial parts of the DVD player.


## Moisture condensation occurs in the following cases:

- When you bring the DVD player directly from a cold place to a warm place.
- When you use the DVD player in a room where you just turned on the heater, or a place where the cold wind from an air conditioner directly hits the unit.
- In summer, when you use the DVD player in a hot and humid place just after you moved the unit from an air conditioned place.
- When you use the DVD player in a humid place.

## Do not use the DVD player when moisture condensation may occur.


If you use the unit in such a situation, it may damage discs and internal parts. Remove the disc, connect the mains power cord of the DVD Player adaptor to the mains power outlet and leave it ON for 2 to 3 hours so it will warm up and cause any moisture to evaporate. This DVD player is set up to play Region 0 DVDs.

# Location of controls

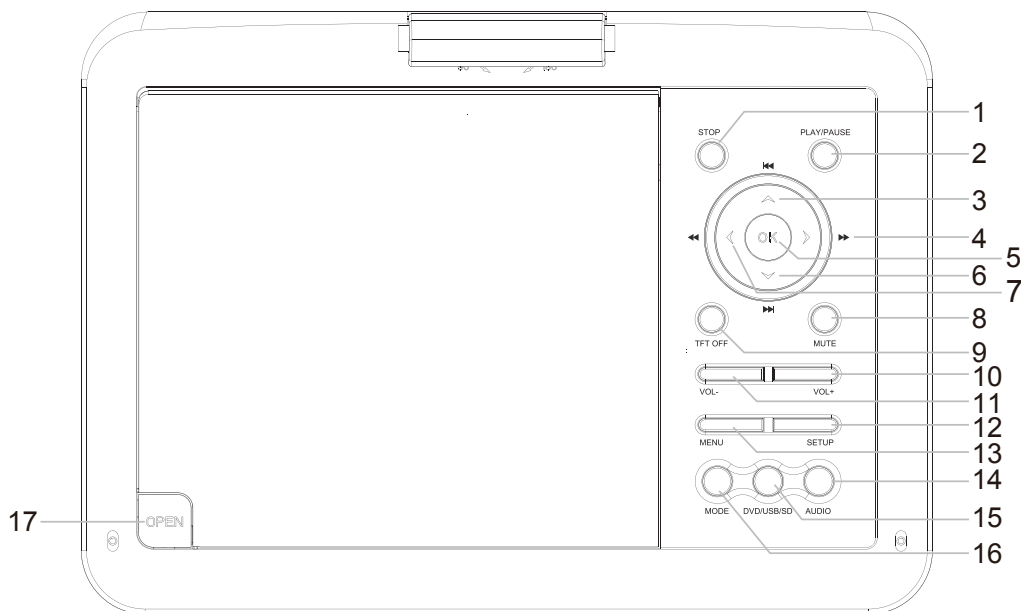

- 1. STOP:** Press to pause playback. Press 2x to stop playback and reset disc to the starting point.
- 2. PLAY/PAUSE:** Press to pause or resume playback.
- 3. PREV ◀◀ :** Press to skip to a previous chapter/track.
- 4. FWD ▶▶ :** Fast forward playback - 2x, 4x, 8x, 20x and normal speed.
- 5. OK :** Press to enter a selected item or choice.
- 6. NEXT ▶▶ :** Press to skip to a previous chapter/track.
- 7. REV ◀◀:** Fast reverse playback - 2x, 4x, 8x, 20x and normal speed.
- 8. MUTE :** Press to mute volume.
- 9. TFT ON/OFF :** Press to LCD On / Off.
- 10. VOL+ :** Press to increase the Volume.
- 11. VOL- :** Press to decrease the Volume.
- 12. SETUP :** Press to enter SETUP Menu.
- 13. MENU :** Press to enter the DVD Menu.
- 14. AUDIO :** Press to adjust the current audio settings for the loaded DVD.
- 15. DVD/USB/SD :** Press to switch between DVD/USB/SD inputs.
- 16. MODE :** Press to change the input.
- 17. OPEN :** Press to open the Disc Tray.

# Location of controls

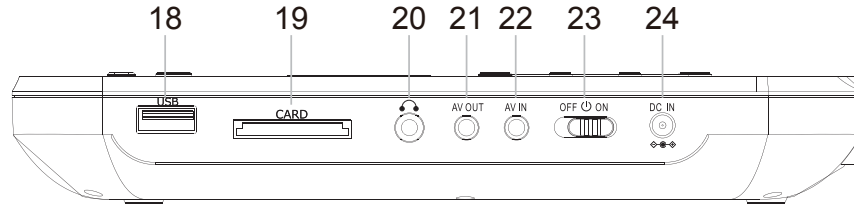

- 18. USB Port:** USB port
- 19. SD/MMC Card Slot:** SD/MMC Card slot
- 20. Headphone jack:** 3.5mm headphone jack output
- 21. AV OUT:** AV output connection
- 22. AV IN:** AV input connection
- 23. POWER ON/OFF :** Power On/Off switch
- 24. DC IN 9-12V :** DC power port

## REMOTE CONTROL:






# Remote control


## Battery Installation and replacement

- \* Unscrew battery cover and remove.
- \* Properly dispose of exhausted batteries.
- \* Insert 2 new AAA batteries.
- \* Be sure the positive(+) and negative (-) ends of the batteries are facing the correct direction.
- \* Replace the battery cover.
- \* Do not mix old and new batteries.
- \* Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

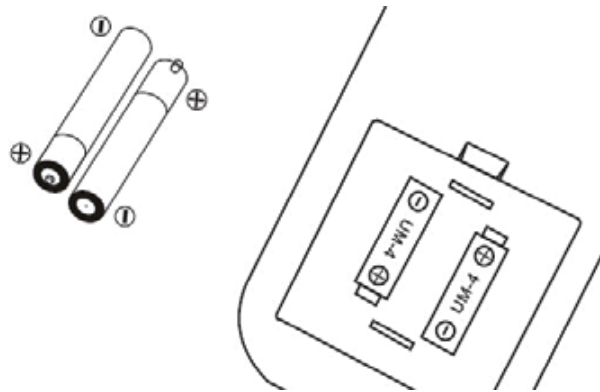

## Handling Discs

- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.

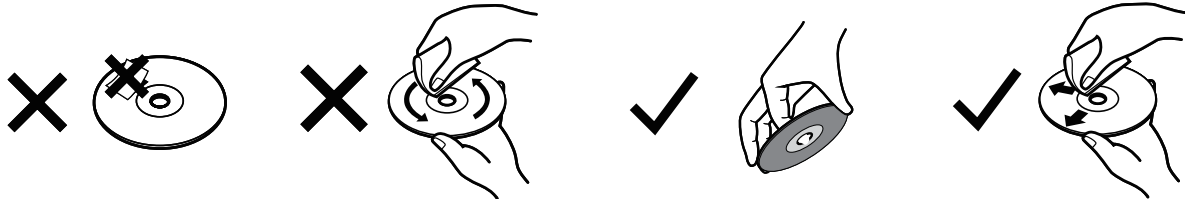

## Cleaning Discs


- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the center outwards with a soft cloth. Always keep the disc clean.
- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

## Storing Discs


- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

# Basic connection

## Connection to TV through AV out Jacks:

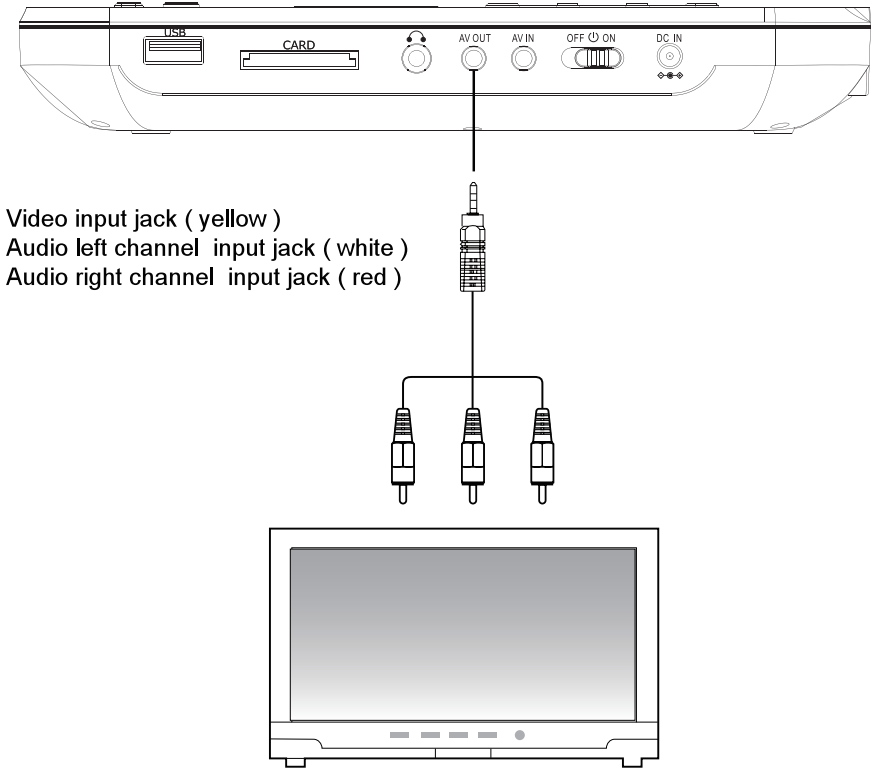

## Connection to the external audio amplifier (with build-in digital audio decoder):

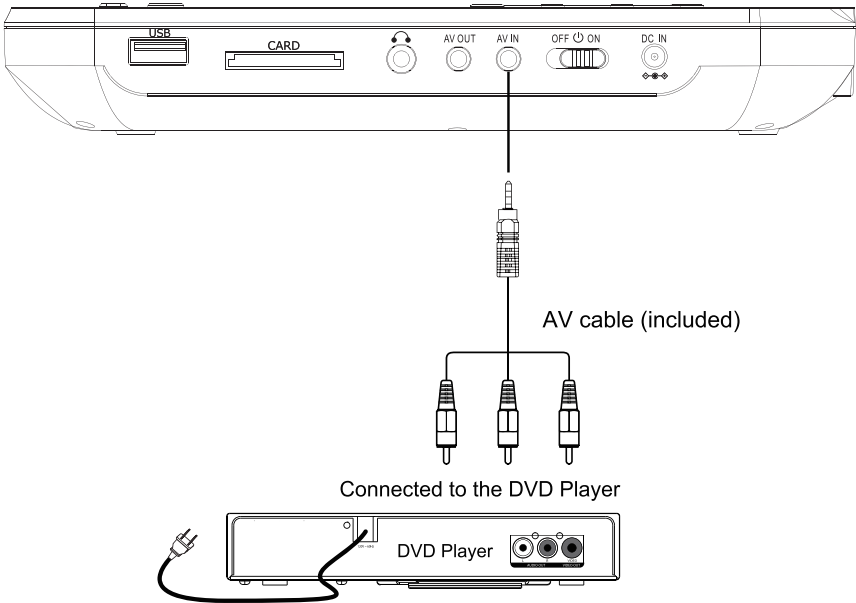

# Basic operation

## POWER

When you plug in the AC/DC ADAPTOR, the POWER ON INDICATOR will light up in red. Slide the POWER ON/OFF KEY towards the right to switch the unit on. The POWER ON INDICATOR will turn to GREEN showing that the unit is in working mode. "No Disc" will show up on the LCD SCREEN if no disc has been loaded. When a disc is loaded "Loading" will indicate on the LCD SCREEN.

## MUTE

When a disc is playing, press this key to turn off the volume completely. Press the key again to turn on the volume.

## NUMBER KEYS ON THE REMOTE CONTROL UNIT

Select a number for the desired track to be played. For example, to select track 25, first press 2, then within 2 seconds press 5.

## SETUP

Refer to the "Features Setup Section" of this manual.

## MENU

When playing a DVD, press this key to show the home menu of the DVD.

## TITLE

Use this key to select the desired title to be played. Note, this feature can only be used on DVDs that are set up with title or chapters.

## FF (FAST FORWARD)

Press to fast forward 2x, 4x, 8x or up to 20x speed. Press PLAY/PAUSE to resume normal playback speed.

## FB (REWIND)

Press to rewind 2x, 4x, 8x, or up to 20x speed. Press PLAY/PAUSE to resume normal playback speed.

## PREV

While playing, press the PREV button to go back to the start of the previous chapter. Each press of this button will skip to the previous chapter until the start of the DVD.

## NEXT

The NEXT button will skip the current chapter and play the next one.

## REPEAT

Press to repeat a specified title, chapter, track or to repeat the entire disc.

## AUDIO (LANGUAGE / CHANNEL)

When playing DVD discs, press AUDIO to switch languages. When playing CD discs, press AUDIO to switch between Stereo/Right Channel/Left Channel/Mixed Channels

## PROG SEARCH

This function only works on CD or JPEG. The CD must be in stop mode. Go to EDIT MODE, then tick the order in which you want your tracks to play. Once selected, go to PROGRAM VIEW, then press PLAY/PAUSE to play the program selection.

## SUBTITLE

Use this key to select subtitle display on a DVD or VCD. The subtitles will automatically be displayed if its not in the player's list of subtitles supported.

**Note:** This function will only work if the disc been played supports subtitles.

## MODE

Press to switch between AV and DVD mode.

## CARD/USB

Use to toggle between SD, MMC card and USB options.

## OSD

Displays current title and menu information.

## COPY

Plug in the USB drive while playing a CD. Press the Subtitle button on the remote control to access the copy interface. In the copy interface, navigate to and select the track you wish to copy. Press OK to confirm your selection. Select Start to begin copying.

# DVD Programming

## RETURN

For any discs that are not DVDs, press to return to the track list menu during playback.

## PBC

Press to return to the PBC menu.


## GOTO

Press to access a specific chapter or title.

## ZOOM

Press to select 2X, 3X, 4X, 1/2, 1/3 or 1/4 Zoom.  
Press again to turn off Zoom

## DVD

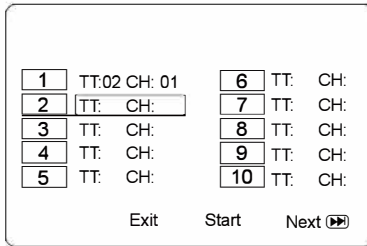


### Program playback

With this option, you choose and program the playback order. You can store up to 16 tracks.

1. Insert a disc.
2. In playing or stop mode, press the **PROG** button. The Program menu appears.
3. Use the number buttons to enter the title number (DVD) or the chapter number (CD).
4. Use **←**, **→**, **↑**, **↓** button moving to the next input. Repeat step 3 until programming is completed.  
Note: press **▶▶** to go to next page for programming track 11 to 16.
5. Highlight the "START" icon, press **ENTER** button to start the program play.
6. Press the **■** button to stop the program playback and clear the program memory.

## CD

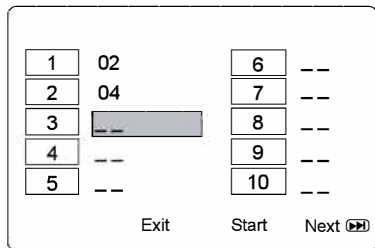


## About Discs

The region number for this DVD player is: Region 0.  
See the following page for information regarding region numbers.

### DISC TYPES:


#### DVD

Data on most DVDs is divided into sections called titles and then into subsections called chapters, each of which gives a title or chapter number. Some features of this DVD Player will not operate with some DVD discs because they are presets. If a function you selected does not run as desired, refer to the manual accompanying the DVD disc.

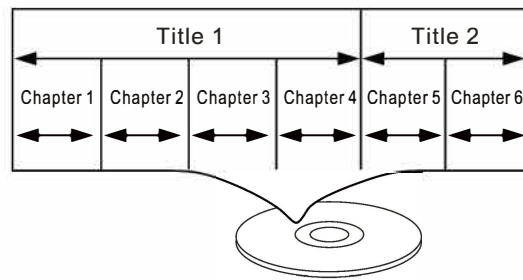

#### AUDIO CD

Data on an audio CD is divided into sections called tracks, each of which is given a track number.

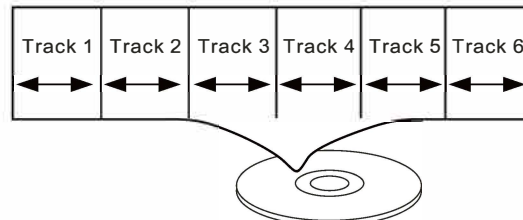


#### JPEG PICTURE CD

Data on a CD with JPEGs is usually not divided into separate folders; they should appear in the root directory.

# Settings Menu

There are five items in the SYSTEM SETUP PAGE. They are TV System, Power Resume, Screen Saver, TV Type, and Default.

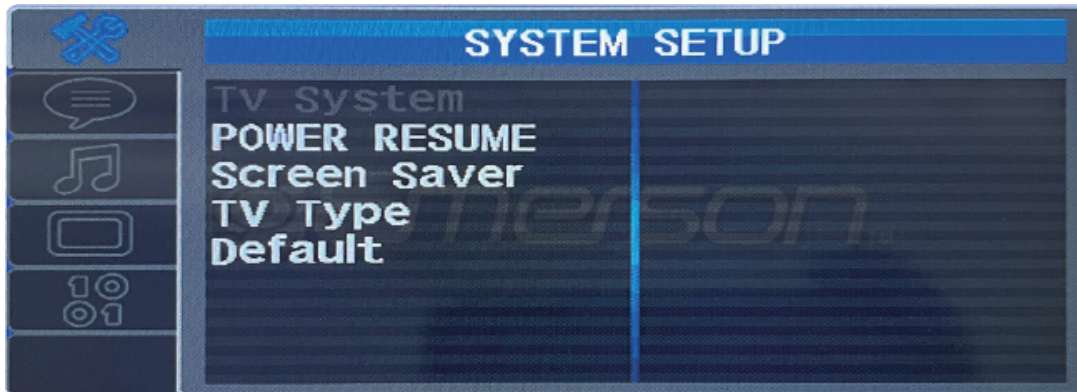

## TV System:

Press the UP/DOWN key to choose NTSC/PAL/Auto.

## Power Resume

Choose the "Power Resume" option, press the direction key RIGHT and UP key to set the function "ON" or "OFF"; when this device is in stop state or switched off, restart the device to resume the last video status.

## Screen Saver:

Choose the Screen Saver, option, press the direction key RIGHT and UP key to choose the desired option to set the function "ON" or "OFF".

ON: If the image remains motionless on the screen, for example the disc is paused, stopped etc, for several minutes, a screen saver will appear on the screen. You can press any key or button to wake it up.

OFF: Disable the screen saver function.

## TV Type:

Choose the "TV Type" option, press the direction key RIGHT and UP key to choose the desired option to set the screen aspect ratio function "4:3PS" "4:3LB" or "16:9".

## Default

After this option is chosen, this function setting column can be restored to the initial factory settings.

## LANGUAGE SETUP

There are four items in the LANGUAGE SETUP PAGE. They are Osd Language, Audio Language, Subtitle Language and Menu Language.



# Settings Menu

## Osd Language:

Select the Osd Language setting, press the direction key to choose the desired "Osd Language" option, then press the "ENTER" key to confirm. There are 8 modes available for such options, English, German, Spanish, French, Portuguese, Italian, Dutch and Chinese.

Note: If the language you choose is unavailable in the Dvd, then this device will automatically choose the default language in such a video.

## Audio Language:

Select the Audio Language setting, press the direction key to choose the desired "Audio Language" option, then press the "ENTER" key to confirm. There are 7 modes available for such options, English, German, Spanish, French, Portuguese, Italian and Chinese.

## Subtitle Language:

Select the Subtitle Lang setting, press the direction key to choose the desired "Subtitle Language" option, then press the "ENTER" key to confirm. There are 7 modes available for such options, English, German, Spanish, French, Portuguese, Italian, and Chinese.

## Menu Language:

Select the Menu Language setting, press the direction key to choose the desired "Menu Language" option, then press the "ENTER" key to confirm. There are 7 modes available for such options, English, German, Spanish, French, Portuguese, Italian and Chinese.

Note: If the language you choose is unavailable in the DVD, then this device will automatically choose the video's default language.

## AUDIO SETUP




### Key:

Press the UP/DOWN key to move the sliding block to adjust the audio.

# Settings Menu

## VIDEO SETUP

There are five items in the VIDEO SETUP PAGE. They are Brightness, Contrast, Hue, Saturation and Sharpness.

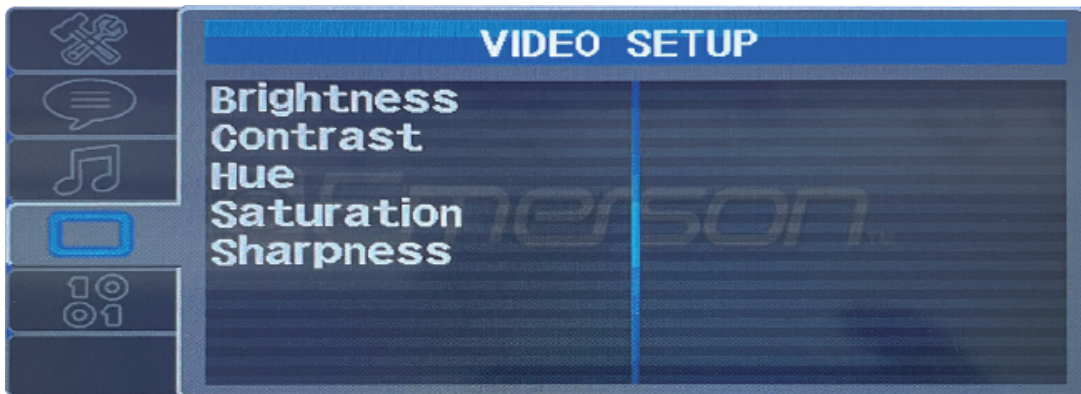

### Brightness

Press the UP/DOWN key to move the module to adjust the brightness of video output.

### Contrast

Press the UP/DOWN key to move the module to adjust the contrast of video output.

### Hue

Press the UP/DOWN key to move the module to adjust the hue of video output.

### Saturation

Press the UP/DOWN key to move the module to adjust the saturation of video output.

### Sharpness

Press the UP/DOWN key to move the module to adjust the sharpness of video output.

## DIGITAL SETUP

There are two items in the DIGITAL SETUP PAGE. They are Dynamic Range and Dual Mono.



### Dynamic Range

Press the UP/DOWN key to adjust the "Dynamic Range Compression" ratio.

### Dual Mono

Press the UP/DOWN key to choose Stereo/Mono L/Mono R/Mix Mono.

# Troubleshooting

## Common Issues

### 1 . Can not play discs

- (1). Check whether the disk is placed correctly or clamped well.
- (2). Should make the disc side which has label on upside.
- (3). If there is dirt on the discs, please clean it first.
- (4). Check if the disc has any serious scratches or damage.
- (5). Confirm that the disc format is supported by this device.

### 2. Remote control does not work

- (1). Move the block way between the remote control and the player.
- (2). Remote control aim at the local window of the remote control receiver.
- (3). Check if the battery of the remote control should be replaced.

### 3. Can not open drive

- (1). Check that the power switch is set to "ON".
- (2). Check battery power; low power may cause automatic shutdown.  
(Refer to the basic functions operation part of "discharge" )

### 4. Rolling or color images (with the TV connection)

- (1). Ensure AV output cable connections are correct, and that plugs are firmly connected.
- (2). Make sure the local color setting on the TV is the same as your device.

### 5. Play and Stop are locked

- (1). Check whether the disc has scratches, dirt or damage.
- (2). Check if the device has low battery power.
- (3). Reboot the device.



# Specifications

AC/DC adapter Input:	AC 100-240V ~ 50/60Hz DC 12V/1A
Power consumption:	18W
Video Standard:	PAL/NTSC/AUTO
Video Output:	1.0V(P-P) / Impedance 75Ω
Audio Output:	1.8V(RMS) / Impedance 10KΩ
Audio Power AMP:	1.0 W(RMS) X 2
Use temperature:	0-40°C
Play time (Lithium battery inside):	Est. 240 min
Disc Compatibility:	DVD+R/WDVD-R/W. DVD CD-R. CD-RW. PHOTO-CD. JPEG, MP3.

## Package Contents:

Manual:	1PC
Remote control:	1PC
AC/DC adapter:	1PC
Car adapter:	1PC
A/V Cable:	1PC

## FCC NOTICE

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at [www.emersonaudio.com](http://www.emersonaudio.com) to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Emerson Technical support.

EMERSON Technical Support

2320 East 49th ST

Vernon, CA 90058

Tel: (866) 411-6292

Email: [support@emersonaudio.com](mailto:support@emersonaudio.com)

Made in China